

# EN Instruction manual

## SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.
  - Farm houses.
- Children shall not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.



- Surface are liable to get hot during use.
- Only use the appliance with the appropriate connector.
- The connector must be removed before the appliance will be cleaned, please make sure the inlet is completely dry before the unit will be used again.
- Warning, the escaping steam can be very hot.
- Be aware of the steam vent during cooking, as there is danger of burns.

## PARTS DESCRIPTION

- Lid
- Steam basket
- Inner bowl
- Display
- Touch control panel
- Measuring cup
- Spoon
- On/off switch

## BEFORE THE FIRST USE

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Always place the inner pot inside the outer pot before switching on the rice cooker.
- Make sure that the inner pot contains liquid, or be ready to immediately add oil, butter or margarine to the inner pot before switching on the rice cooker.
- Always dry the outer surface of the inner pot before placing it inside the cooker. Any moisture remaining on the inner pot surface may cause a crackling noise while the unit is heating up.
- Press the On/Off switch to the desired position to turn the device on or off.
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.

## USE

### Timer

- Press the timer button to set the timer function. Press once to increase by 30 minutes. Long press to increase automatically in 30 minutes interval.
- Timer can be pre-set up to 24 hours.
- Note: Recommended timer pre-setting is no more than 12 hours to avoid food deterioration.
- After setting the pre-set time press the desired program button that needs to be started. The screen displays the completion time and starts the countdown.
- Both lights of the timer button and selected program light up.

### Rice

- Press the Rice button to select the Rice function.
- Indicator light above button will go on.

- Program starts and digital screen displays a moving "-" from bottom to top.
- The Rice function automatically enters the stew stage after cooking and display countdown timer in the digital screen.
- Rice function automatically enters the temperature preservation function when program completes.
- See "cooking rice" chapter for more information.

### Warm/Cancel

- In standby mode press the Warm/Cancel button to start the temperature preservation program.
- The digital screen displays "bb" and the light above the Warm/Cancel button will be on to indicate the temperature preservation program is active.
- Press Warm/Cancel button again to disable the temperature preservation program.
- Food is best to be consumed within 5 hours after cooking, so that flavor and taste do not deteriorate.
- If the device is in a program press Warm/Cancel button to cancel and exit this program and return to standby mode.

### Steam

- Put water in the inner bowl and ensure the amount of water is always lower than the steam basket.
- Put the steam basket into the inner bowl.
- Add the desired ingredients to the steam basket.
- Press the Steam button to select the Steam function.
- Indicator light above button will go on.
- Press button to adjust the steaming time, the default time is 30 minutes.
- Time can be adjusted between 10 to 60 minutes.
- When the water is boiled, the timer starts to count down on the digital screen.
- Steam function automatically enters the temperature preservation function when program completes.

### Soup

- Press the Soup button to select the Soup function.
- Indicator light above button will go on.
- Press the button to adjust Soup cooking time, the default time is 1.5 hours.
- Time can be adjusted between 30 minutes to 3 hours.
- When the water is boiled, the timer starts to count down on the digital screen.
- Soup function automatically enters the temperature preservation function when program completes.

### Porridge

- Press the Porridge button to select the Porridge function.
- Indicator light above button will go on.
- Press the button to adjust Porridge cooking time, the default time is 2 hours.
- Time can be adjusted between 30 minutes to 2 hours.
- The Porridge function will start and the digital screen display the countdown timer.
- Porridge function automatically enters the temperature preservation function when program completes.

### Pasta

- Press the Pasta button to select the Pasta function, Pasta indicator light will go on.
- Add water and some salt (refer to the proportion table).
- The Pasta program starts, wait until the water boils.
- When the water is boiled, cancel the program using the Warm/Cancel button.
- Press Pasta button again to adjust Pasta cooking time, the default time is 30 minutes.
- Time can be adjusted between 3 to 30 minutes.
- The digital screen displays the countdown timer, open the cover, add the corresponding amount of pasta according to water level and start mixing (refer to the proportion table), stir 1 to 2 minutes, close the cover and continue cooking.
- Pasta function automatically enters the temperature preservation function when program completes.

Proportion table	
Water volume	Pasta (g)
2 cups of water	100g
4 cups of water	200g
6 cups of water	300g
8 cups of water	400g

### Yogurt

- In a sauce pan, heat milk to +/- 80°C on the stovetop, stirring constantly to prevent scalding.
- Allow milk to cool to 45°C for approximately 1-2 hours. Add yogurt culture. Stir mixture thoroughly.
- Pour milk mixture into the inner pot.
- Be sure inner pot is clean and dry before placing into the rice cooker.
- Press Yogurt button, light above button will go on.
- Press "Yoghurt" button to adjust the Yogurt cooking time, the default time is 8 hours. Time can be adjusted between 6 hours to 12 hours.
- Yogurt light stays on and digital screen shows countdown timer.
- The cooker returns to standby mode when Yogurt program completes.
- Once incubation is complete, store the yogurt in an air tight container in the refrigerator.
- Do not leave it in the rice cooker.

### Cake

- Defrost frozen dough thoroughly before use. Don't use too much, or the dough might overwhelm the appliance.
- Wipe the bowl with cooking oil, put the dough into the bowl.
- Press the Cake button.
- Indicator light above button will go on.
- Press Cake button again to adjust the cooking time, the default timing is 30 minutes. Time can be adjusted between 20 minutes to 3 hours.
- Program will start. The digital screen shows countdown timer.
- Bread function automatically enters the temperature preservation function when program completes.

### Additional information

Do not pour water or put ingredients in the device without the inner bowl inside.

The maximum amount of water and ingredients should not exceed the highest mark inside the inner bowl.

Press the desired program button once for default cooking time. Pressing this button short will add extra time and cycle through the available time settings (a beep sound will be heard by every new setting). Long press program button to increase automatically and fast cycle through the available time settings.

Once a program has finished the device will give a beep sound. Programs can be interrupted or stopped by pressing the Cancel button. Always turn the on/off switch to the off position after use and unplug the device.

This electrical appliance contains a heating function. Surfaces, also different than the functional surfaces, can develop high temperatures. Since temperatures are differently perceived by different persons, this equipment shall be used with caution. The equipment shall be touch only at intended handles and gripping surfaces, and use heat protection like gloves or similar. Surfaces other than intended gripping surfaces shall get sufficiently time to the cool down before getting touched.

### Cooking rice

- Use the measuring cup provided to measure the desired quantity of rice. As a guide one cup of rice is sufficient for one person, but this will vary according to individual tastes. Fill the cup with rice leveling the top.
- Thoroughly wash the rice in several changes of clean water and drain. If you don't wash the rice this may cause poor results and/or a buildup of steam within the appliance. Do not wash the rice in the inner bowl as you may damage it.
- Put the rice in the inner bowl and level the surface of the rice. Add sufficient cold water to the corresponding level marked on the bowl e.g. to cook 6 cups of rice, place the washed rice into the inner bowl and then

- fill with water up to the 6 cup level marked on the inner bowl. You may adjust the amount of water added for your own personal taste. For a softer rice add a little more water, and for a firmer rice a little less water.
- Place the inner bowl in the rice cooker ensuring that there is no rice or any moisture on the outside of the bowl.
- Cover with the lid, ensuring that the vent hole in the lid is situated away from the operator.
- Start the Rice program (see chapter Rice).
- Carefully lift the lid and allow any condensation to drip into the rice cooker. Use the spatula provided to fluff up the rice which is then ready to eat. Replace the lid as quickly as possible. Consume the stirred rice within 1 hour.

### CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Wipe dry the water in condensation collector (located below the hinge) with a dry cloth and clean the multi-cooker with a damp cloth.
- Open the top cover and clean the cover plate.
- Clean the water on heating plate (if any) with cloth; polish the burnt rice on the plate (if any) with steel scrubber or sand paper and wipe the water and rice around and below the cooking pot before placing it in.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

### ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.tristar.eu!](http://www.tristar.eu!)



[WWW.TRISTAR.EU](http://WWW.TRISTAR.EU)

Tristar Europe B.V. | Jules Verneweg 87  
5015 BH Tilburg | The Netherlands