

## EN Instruction manual

### SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

### PARTS DESCRIPTION

1. On/off switch pedal
2. Cord rewinding pedal
3. Bagless accessory/Dust bin
4. Plastic (filter)frame
5. Dust bag holder
6. Combi nozzle

### BEFORE THE FIRST USE

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Place the hose in the vacuum cleaner until it clicks (to release the hose, press the two latches on the hose connector and take it out). Place the other side of the hose into the tube.
- Use the bagless accessory or place a dust bag, see the chapter "Cleaning and maintenance" for instructions on how to install them correctly.
- Only use the device if all the filters included the dustbag are placed properly, a damaged or improperly installed filter or dustbag may damage the unit.

### USE


- Connect the different nozzle tools/floor brush to the tube for different cleaning purposes. The floor brush has two positions, soft/textile surfaces. The combo nozzle is for narrow surfaces.
- Turn on the appliance: Hold the plug and pull out the cord, then insert the plug into the power socket. Make sure that the power supply corresponds to the required power mentioned on the rating label. Press the on/off switch pedal to turn on the power.
- Turn off the appliance: After use, press the on/off switch pedal, the appliance is turned off. Pull the plug out of the power socket, press the cord rewinding pedal, the power cord will be drawn in.
- To move the appliance from room to room, unplug and carry it by using the handle. Never pull the appliance by its cord when moving.

### CLEANING AND MAINTENANCE

- The plug must be removed from the power socket before any maintenance or replacement.
- The motor protection filter (as found under the front cover) should be removed and rinsed twice a year or whenever it is visible clogged. If the filter is damaged, a new filter should be replaced.
- The exhausted filter should be cleaned in time. Unclip the grille and shake the filter to clean any dust accumulated. Then relocate the filter and clip the grille.
- Open the dust bin by pressing the lock and pulling the lid towards you.



- Remove the dust and debris from the dust bin.

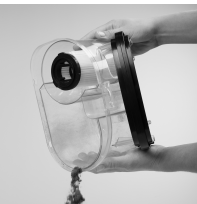

- Placing the bagless accessory**
- Open the front cover by pressing the lock clip.



- Remove the plastic (filter)frame from the dust bag compartment.
- Insert the bagless accessory with the handle up in the dust bag compartment.



- Push the handle down.



- Close the front cover.



### Placing the dust bag

- Open the front cover by pressing the lock clip.



- Lift off the Paper bag from the dust bag holder. Please always keep the dust inlet pointing upwards in order to void dust leakage.
- Replace the dust bag and install a new dust bag to the holder. Make sure the card of dust bag reaches the bottom of the dust bag holder.



- Close the front cover.



### ENVIRONMENT



- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.tristar.eu](http://www.tristar.eu)



[WWW.TRISTAR.EU](http://WWW.TRISTAR.EU)

Tristar Europe B.V. | Jules Verneweg 87  
5015 BH Tilburg | The Netherlands